




Installation Information

Item #P0886

Wall Mount Kitchen Faucet with Soap dish, 8" Centers


Warranted only if installed by a qualified licensed plumber. When attaching parts to the faucet body, take care not to scratch the finish when tightening the nuts.

1. Shut off the water supply valves before installation.
2. Rough-in $\frac{1}{2}$ " IPS (Iron Pipe Size) nipples, $\frac{1}{2}$ " past the finished wall at 8" on center.
3. Thread the wall mount couplers onto the $\frac{1}{2}$ " IPS nipples, using Teflon tape on the threads.



4. Attach the faucet body to the wall mount couplers and tighten nuts to secure. Use care not to scratch the finish.
5. Attach the spout to the faucet body, tighten nut.
6. Use screw provided to attach soap dish to spout. Insert strainer on soap dish.
7. Put handles onto valve stems, secure with handle screw.
8. Remove the aerator from the end of the spout and turn on water supply to flush hot and cold lines until the water is clear.
9. Re-install the aerator and enjoy your beautiful faucet.

10. Make no adjustments to valves or valve stems. They are tested at the factory for optimum performance.

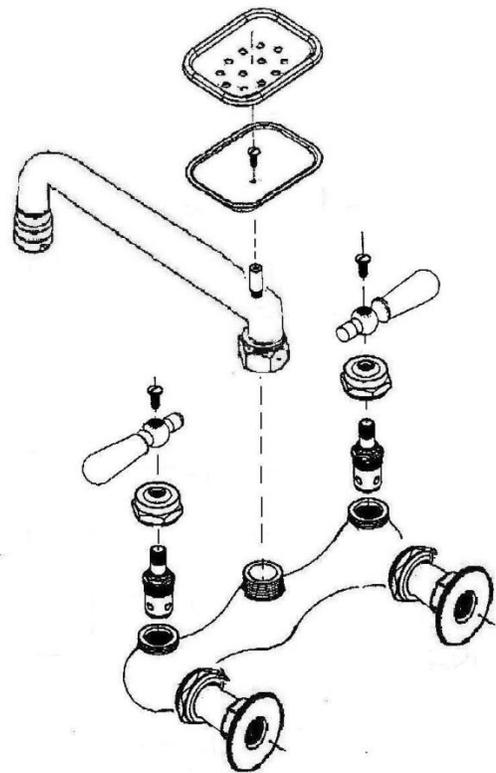

PARTS INCLUDED:

- (1) 8" Center Faucet Body
- (1) Handle Pair
- (1) Wall Mount Coupler Pair
- (1) Spout with Soap dish