



PALLADIAN TRIM ONLY 3/4" VOLUME CONTROL AND 4 - PORT DEDICATED DIVERTER

ROHL Transitional Palladian

A4812LM (finish)**TO** (Metal Lever) **A4812XM** (finish)**TO** (Cross Handle)

FEATURES


- Trim set with escutcheon, dome and handle only to:
- A4911BO rough
- R1040R rough
- R1062BO rough
- Must order rough to complete
- All components made of brass
- Please note, the min/max valve depth is different than the standard min/max dimensions for the A4911BO rough valve. Please set the depth of the valve carefully.


COLORS/FINISHES

- Polished Chrome
- Polished Nickel
- Satin Nickel
- Tuscan Brass
- Inca Brass

WARRANTY


- Limited Lifetime*
- *No warranty on Tuscan Brass finish

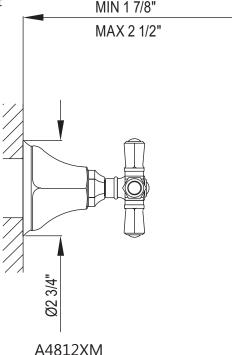

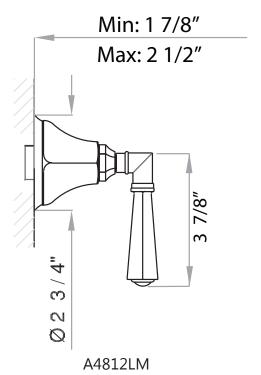





A4812TO Spare Parts

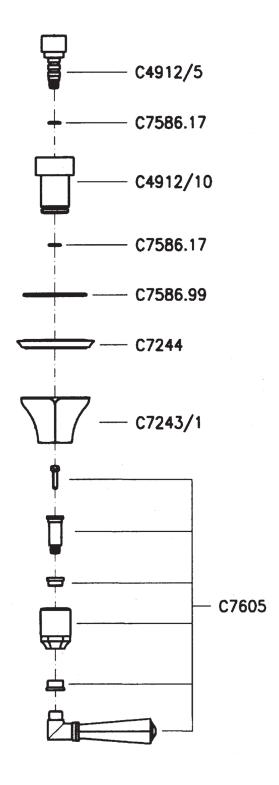




Installation Guide



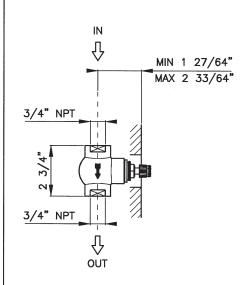

Volume control external part

Art. A4812LM--Art. A4812XM--

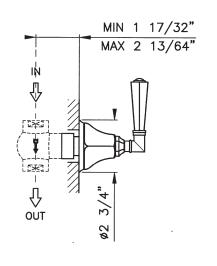

Preliminary information

- 1. The A4911BO and A4912 trim kit are separate units. You must order both to complete the package.
- 2. The A4911BO has the adaptor C7594 in the box
- 3. The A4911BO is port specific. Make sure the arrow points in the direction of the flow.
- 4. 1 $\frac{1}{2}$ extension kit C4912 is available. Must order separately.

a - Preparation

1. Flush the system before and after installation.

b - Assembly of inside body


- 1. Estimate the finished wall and install the rough at the required depth.
- 2. Make sure the arrow on the body point in the direction of the flow.
- 3. DO NOT SOLDER THE CONNECTIONS: Heating the valve will damage the cartridge. There is no warranty on cartridges damaged by heat.
- 4. Leave the plastic mudguard in place if further work is done in the area.



c - Assembly of external part

Please note: The trim kit is assembled out of the box. There are no parts assembled. Parts 2 through 12 are preassembled (except part 5).

- 1. Remove the mudguard.
- 2. Confirm the installation of adaptor C7594.
- 3. Place the ring #5 between the wall and the cap #6. Position the lever at 12 o'clock and screw the body #3 on to the rough valve #1 with the adaptor C7594 in place. Please note: Part #2 is a part of the assembly and not an extension. The extension kit is number C4912 and is not part of the trim assembly. It must be ordered separately.

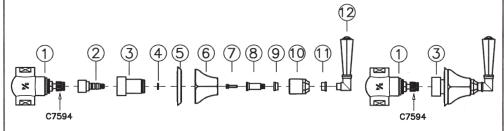

d - Before use

Turn on the water supply to the faucet.


Maximum temperature water supply to the faucet is 145° F.

Maximum recommended pressure is 75 psi.

CHECK THE INSTALLATION CAREFULLY FOR LEAKS AFTER INSTALLATION.

If further building work is to be carried out in the vici of the faucet, it should be covered to prevent paint, adhesive, etc. from damaging the surface.

CARE AND MAINTENANCE

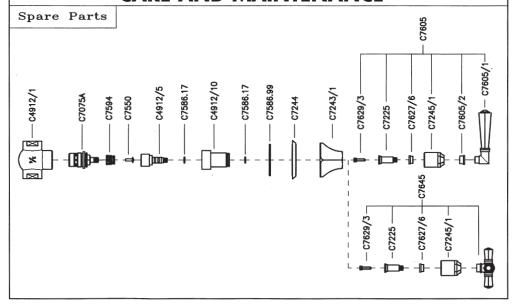



Care and use for finishes

Country Bath Products are all authentic finishes that have not been coated with any product.

After each use, pat the fixture down to remove any excess water. This will prevent any water spotting or mineral build—up. Use only soft liquid soap and water to clean the surface. Use a soft brush to clean any gaps. Avoid any products that have ammonia or alcohol like Windex, 409 or Fantastik. These products can damage the finish leaving black or white spots. Never use an abrasive product like Softscrub, Comet, Ajax or Bon Ami.

For deep polishing we recommend Bruno's Wax for all finishings.


Tuscan Brass is a living finish and has no warranty. It will lighten with use. To extend the life of the finish, apply Bruno's Wax by patting it on, letting it dry and patting it off. Never rub or buff this finish.

WARRANTY

Country Bath Collection has a limited lifetime warranty.

"Warranty Exclusion: This warranty is for normal domestic use only and excludes defect or injury caused by or resulting from misuse, abuse, neglect, accidental damage or improper installation". There is no warranty on the finish Tuscan Brass.



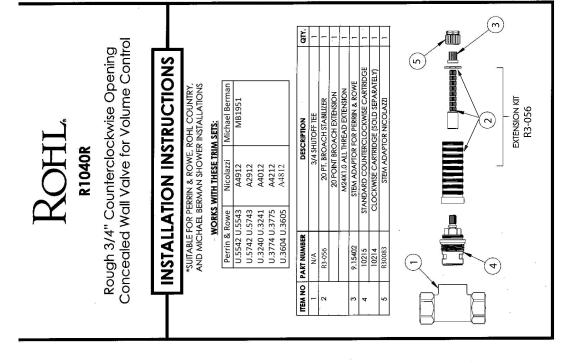

ROHL WARRANTY POLICY

ROHL PRODUCTS ALL CARRY WARRANTIES AGAINST

MANUFACTURING DEFECTS.

THE R1040R VALVES CARRY A LIMITED LIFETIME

OPTIONS, REPLACEMENT PART(S) OR PRODUCT (OR A COMPARABLE ALTERNATIVE PRODUCT) TO REPLACE THOSE WHICH HAVE PROVEN DEFECTIVE IN ROHL LLC WILL PROVIDE FREE OF CHARGE, AT ITS WARRANTY.


SPARE PARTS AND SERVICE:

3 PARKER

IRVINE, CA 92618 P (714) 557-1933 F (714) 557-8635 WWW.ROHLHOME.COM

MATERIALS OR WORKMANSHIP.



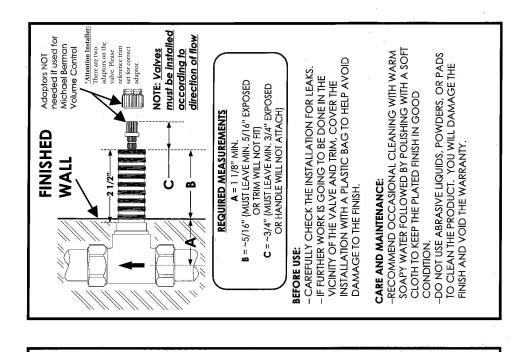

- MUST HAVE BOTH ROUGH AND TRIM TO COMPLETE THE

INSTALLATION

NSTALLATION NOTES

RECOMMENDED OPERATING PRESSURE:

- MINIMUM 15 PSI - MAXIMUM 75 PSI

TEMPERATURE RANGE:

SPECIFICATIONS

- MINIMUM 34°F - MAXIMUM 185°F FLUSH THE PLUMBING SYSTEM BEFORE INSTALLING THIS

INSTALLATION AND MAKE SURE ALLOWANCE IS MADE

MUST FOLLOW DIMENSIONS SUPPLIED FOR

FOR FINISHED WALL MATERIAL SUCH AS TILE, ETC. MUST INSURE THE HANDLE IS VERTICAL WHEN THE VALVE IS IN THE "OFF" POSITION.

Berman trim shown).

NOTE: Lever should

be in UP position


for 'off' (Michael

IMPORTANT; WE RECOMMEND THE USE OF A LICENSED PLUMBER TO INSTALL THIS PRODUCT. PLEASE READ AND UNDERSTAND THE PROVIDED INSTALLATION

NFORMATION BEFORE PROCEEDING.

Inlet Only



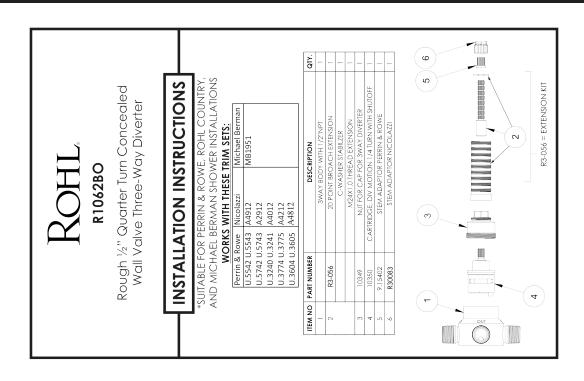

ROHL WARRANTY POLICY

ROHL PRODUCTS ALL CARRY WARRANTIES AGAINST MANUFACTURING DEFECTS.

THE RIOSZBO VALVES CARRY A LIMITED LIFETIME WARRANTY

WARRANTY.

ROHL LLC WILL PROVIDE FREE OF CHARGE, AT ITS OPTIONS, REPLACEMENT PART(S) OR PRODUCT (OR A COMPARABLE ALTERNATIVE PRODUCT) TO REPLACE THOSE WHICH HAVE PROVEN DEFECTIVE IN MATERIALS OR WORKMANSHIP.

SPARE PARTS AND SERVICE:

ROHL 3 PARKER IRVINE, CA 92618 P (714) 557-1933 F (714) 557-8635 WWW,ROHLHOME,COM

Consult your local ROHL showroom for additional information and specifications. For complete warranty details and a list of showrooms, go to www.rohlhome.com.



